



15370 Barranca Parkway
Irvine, CA 92618-3106
USA

OMNIKEY 6221 / OMNIKEY 6321

SAM/SIM/μSD CARD INSERTION

MAY , 2010

Version 1.01



Copyright

© 2010 HID Global Corporation. All rights reserved.

Version History

Date	Author	Description	Document Version
05/11/10	MP	Initial version	1.00
05/17/10	MP	added OMNIKEY 6321	1.01

Contents

1	Introduction	3
2	SIM/SAM insertion	4
3	microSD card insertion (only for OMNIKEY 6221)	5

1 Introduction

This manual describes how to insert a SAM/SIM- or μ SD card into the OMNIKEY 6221 and how to insert a SAM/SIM card into a OMNIKEY 6321.

Technical problems or questions:

<http://support.hidglobal.com>


2 SIM/SAM insertion

- Open the card cover by holding the device in one hand upright and pressing at the green marked point on one side with your thumb and move the thumb upwards on this side until the cap is loose, than do the same on the other side to completely open the cover (Pic.1):



Pic. 1

- Insert the SIM Card contacts **DOWN** in the upper slot (Pic. 2) as shown in Pic. 3:
NOTE: For the OMNIKEY 6321 only the upper slot exists (Pic. 4)!
The orientation of the card is also engraved on the cap. (see yellow arrow)

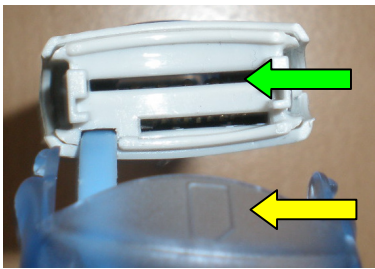

Pic. 2



Pic. 3



Pic. 4

- After the SIM card is completely inserted close the card cover again (Pic. 5):





Pic. 5

3 microSD card insertion (only for OMNIKEY 6221)

- Open the card cover by holding the device in one hand upright and pressing at the green marked point on one side with your thumb and move the thumb upwards on this side until the cap is loose, than do the same on the other side to completely open the cover (Pic.6):



- Insert the microSD Card contacts **UP** (Pic.7) in the lower slot (Pic. 8) as shown in Pic. 9:

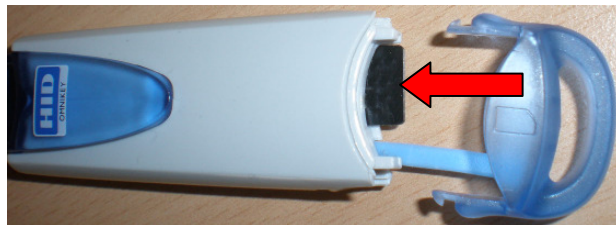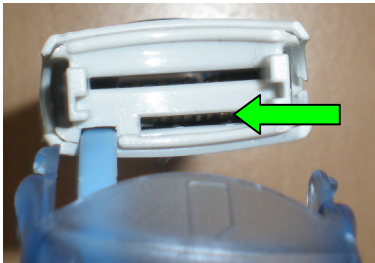

- After the microSD card is completely inserted close the card cover again (Pic. 10):

